


# HM1973A "Sound of Thunder" installation instructions

## Tyme Safari mainboard

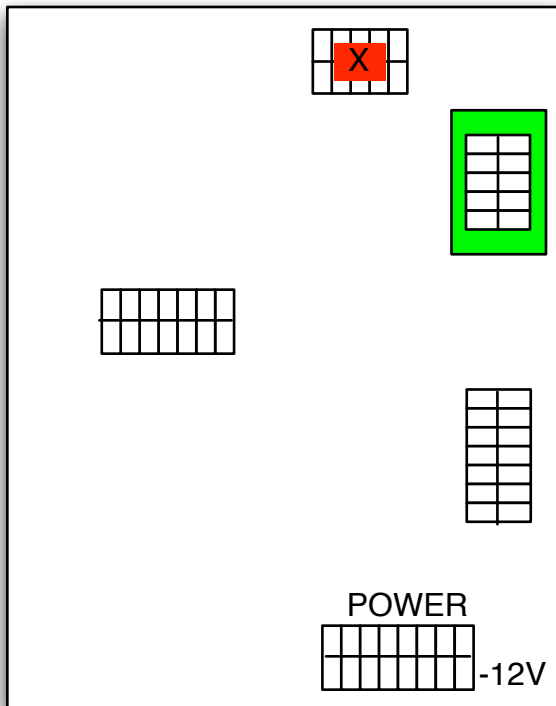

Connect expander HERE - red band DOWN

1. Observe antistatic precautions.
2. Remove your Tyme Safari from the rack.
3. Unscrew the four black screws from the back side of the PCB.
4. Pull the rear PCB away from the panel and orient as shown in the picture above.
5. Connect the Sound of Thunder's ribbon cable to the header on the right edge of the board as shown, Red band down. Do not touch the header on top of the board except in situations of emergency disablement.
6. Put the PCB back into position and replace the screws.
7. Re-install in rack.